

Swing Shut Extendable Gate

WIDTH

Adjustable from 73 to 95.5cm

HEIGHT

Top of gate to floor: Metal Gate 75cm Wooden Gate 76cm

IMPORTANT - READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

This safety barrier conforms to EN 1930:2011 when fitted according to these instructions between two clean, structurally sound surfaces.

This safety barrier is designed for children up to 24 months.

This safety barrier is for domestic use only.

Manual closure system.

Suitable for fixing across door openings and at the top and bottom of stairways.

Make sure that you use the correct type of fixings depending on the surface available:

Self-adhesive pads for appropriate surfaces or wood screws for wooden surfaces, multiple usage dowels and screws for brick, concrete or cement surfaces, and metal screws for metal surfaces.

If the gate has been exposed to an accident, it must not be used again.

Do not allow older children to climb over this gate as this may pose a danger.

Only use original Clippasafe spare parts for this product.

Periodically check the security of the fixings and general condition of each part. Adjust as necessary referring to these instructions.


WARNING: Read these instructions before installation as incorrect installation can be dangerous.

WARNING: Incorrect fitting or positioning of this safety barrier can be dangerous.

WARNING: Do not use the safety barrier if any components are damaged or missing.

WARNING: The safety barrier must not be fitted across windows.

WARNING: Stop using the barrier if the child is capable of climbing over it.

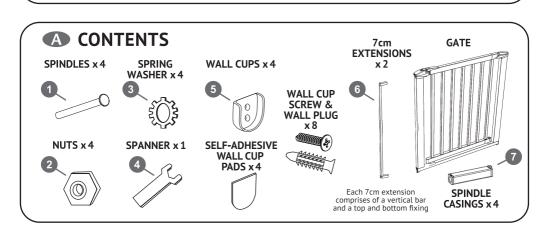




WARNING - INCORRECT FITTING OR POSITIONING OF THIS SAFETY BARRIER CAN BE DANGEROUS

If this gate needs to be fitted to a round shaped newel post, 'Y' shaped spindles are available separately which replace the standard spindles and wall cups supplied with this gate

Fixing surfaces must be suitable for the purpose and structurally sound.

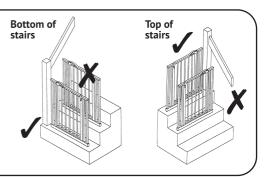

SUITABLE SURFACES

FRAME

STEEL DOOR

D WALL - WOODEN RECOMMENDED

PRE-INSTALLATION **ADVICE**

The surfaces to which the gate fits should be completely flat and a minimum of 5cm wide.

This product may require the purchase of appropriate fixing aids suitable for the surface to which the wall cups are to be fitted.

ds suitable for the surface ps are to be fitted.		LY SUPPORTED WOOI OOR FRAME / SKIRTII	PORTED WOODEN S AIR / NEWEL POST)	ERED SURFACE	ER BOARD STUD WA	WALLPAPERED SURFACE	. SURFACE .UMINIUM / STEEL DO	IC SURFACE VC DOOR FRAME)	11C TILED SURFACE	
	S GATE OFFERS THE LOWING FIXING OPTIONS:	RIGIDL (eg. DC	UNSUPPORTI (eg. STAIR / N	PLASTI	PLASTE	WALLP	METAL (eg. AL	PLASTI (eg. UP'	CERAMIC	
>	LOW PRESSURE MOUNTING WITH ADHESIVE MOUNTED WALL CUPS ON BOTH SIDES	1	/	\	√	X	1	\	/	
\	LOW PRESSURE MOUNTING WITH SCREW MOUNTED WALL CUPS ON BOTH SIDES	1	/	\	1	1	1	\	\	

TED WOODEN SURFACE / SKIRTING BOARD)

SURFACE

WARNING - NEVER USE WITHOUT WALL CUPS.


Without extensions, this gate is suitable for openings between 73cm (28¾in) and 81.5cm (32in) wide. If gap is wider, see extension guide below. If necessary, fit the extension(s) first, then follow the installation instructions (Section D).

Two 7cm extensions are included, 18cm extensions are available separately.


	EXTENSIONS REQUIRED					
GAP	7cm	18cm	7+18cm			
81.5 - 88.5cm	1					
88.5 - 95.5cm	2					
95.5 - 99.5cm		1				
99.5 - 106.5cm	1	1				
106.5 - 113.5cm	1		1			
113.5 - 117.5cm		2				
117.5 - 124.5cm		1	1			
124.5 - 131.5cm			2			

WARNING -GATE MUST BE FITTED UPRIGHT AS SHOWN IN ORDER FOR THE SWING CLOSE **MECHANISM TO FUNCTION** CORRECTLY.

WARNING - WHEN FITTING ON A STAIRWAY ALWAYS BLOCK ONE OPENING DIRECTION SO THAT THE GATE WILL ONLY OPEN AWAY FROM THE STAIRS (see installation instructions).

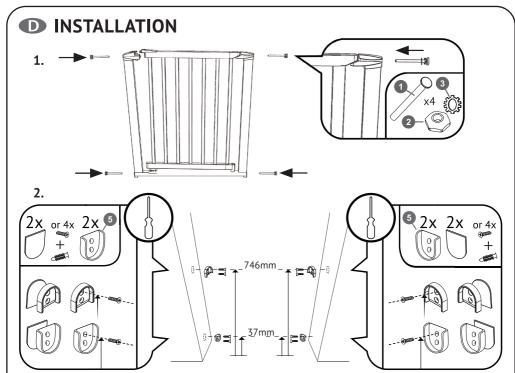


The distances shown above are for screw fixing only. If using adhesive pads, ensure that the wall is clean, dry and free from any grease and align the wall cups to the spindles in the gate. For maximum security, note the opposite orientation of top and bottom wall cups.

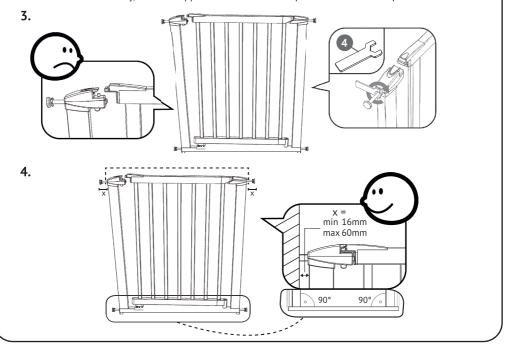


5.

6.

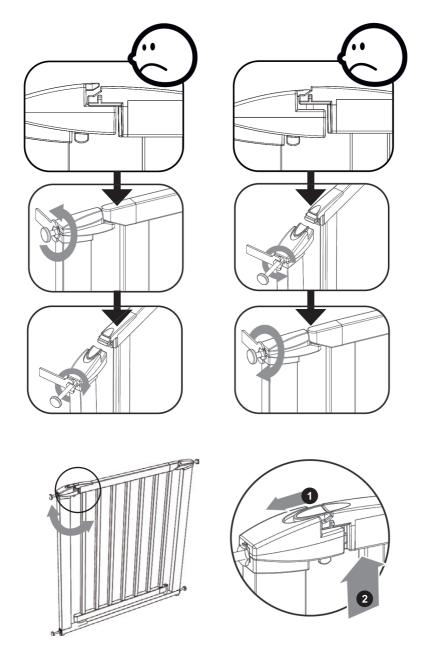


To close the gate, swing the gate door shut from the open position or close it manually by holding the handle and closing the gate door until it locks into position. Always check that the gate is closed and locked before leaving unattended.


7. To block the opening direction of the gate.

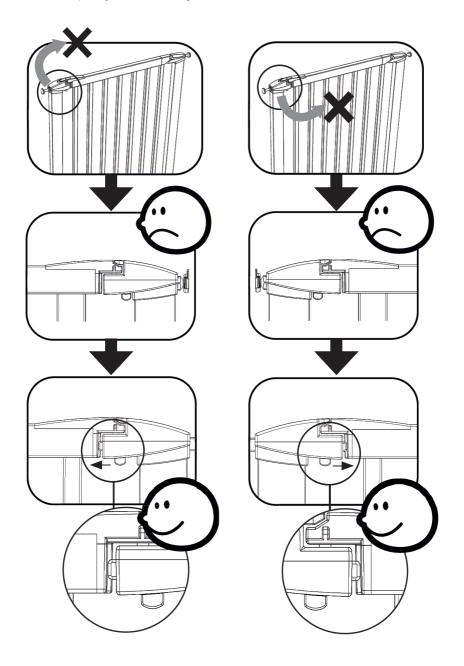

■ FITTING A 7cm EXTENSION 1. 2. 3. 5. 6.

7. If a second 7cm extension is required repeat on the other side of the gate.

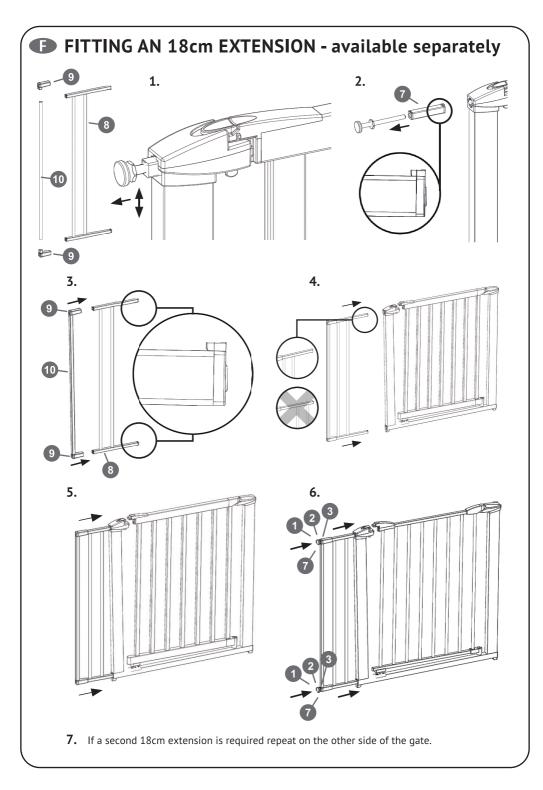

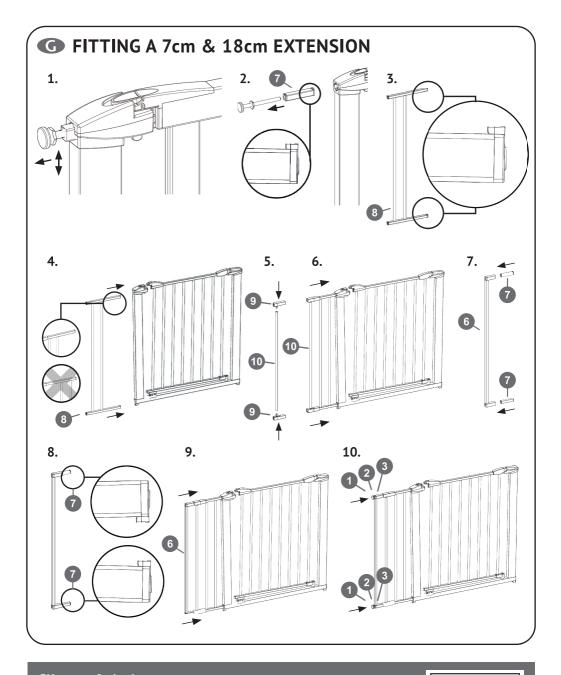

Clippasafe Ltd.

Lanthwaite Road, Clifton, Nottingham, NGII 8LD, England Tel: 0115 92I 1899

E-mail: enquiries@clippasafe.co.uk

www.clippasafe.co.uk

Model No.130 - Metal Gate Model No.132 - Wood Gate

