



**IMPORTANT - PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE**

# Fireguard Depth Extensions

## Instructions for Installation and Use

### DIMENSIONAL INFORMATION:

These extensions are compatible with Clippasafe Extendable Fireguard Model No.1001 or with Clippasafe Classic Fireguard Model No.1002. They must not be fitted to any other Fireguard. The Fireguard and this extension should be securely fixed in accordance with these instructions such that no part of the Fireguard is closer than 300mm to any exposed burning fuel, heated elements or radiants.

Depth of Fireguard with extensions fitted: Adjustable from 46cm to 76cm  
Height: 65cm

### PACK CONTENTS:

Side Extension Panels x 2  
Screws x 8  
Blank clamping plates x 8  
Threaded clamping plates x 8  
Instruction Sheet

### TOOLS REQUIRED:

For Assembly:  
Cross Head Screwdriver  
Other tools may be required for wall mounting this Fireguard depending on the surface to which it is to be fitted.

### ASSEMBLY

Assemble the Fireguard in accordance with the instructions provided with the Fireguard.

1. Remove the safety hooks and rings from each side of the fireguard.
2. Lay one depth extension over the Fireguard side panel and adjust to the desired depth. The depth extension must overlap horizontally by a minimum of 3 squares.
3. Using the blank clamping plates, threaded clamping plates and screws, fix the Fireguard side panel and depth extension together. To do this, position a blank plate on the outside and a threaded plate on the inside, then use the screw to clamp the plates together (Fig. 1). If securing the extension to give maximum depth, position the clamps at points **A**. If less than maximum depth is required, position the plates between 2 and 3 squares in from the overlapping edges (points **B**).
4. Repeat for the other side of the Fireguard.
5. Refit the safety hooks (D) on each side of the fireguard and mount to the wall following the instructions provided with the Fireguard.

### IMPORTANT:

Attach and position in accordance with manufacturer's instructions. The Fireguard and extensions must be assembled before use and fitted securely, in accordance with these instructions, to provide adequate protection. Position the Fireguard so that all parts of it are at least 300mm away from any exposed burning fuel, heated elements or radiants.

### MAINTAINING YOUR FIREGUARD AND EXTENSIONS:

To clean, wipe over with a damp cloth. Do not use harsh abrasives. If your Fireguard becomes chipped, touch up with a non-toxic black enamel paint. Only use genuine replacement parts which are available from the manufacturer.

### SAFETY ADVICE:

**WARNING: No object should be placed on the Fireguard.**


**WARNING: Do not dry washing or air clothes on the Fireguard.**

A Fireguard is designed to protect people from falling into a fire, prevent burns and reduce the risk of injury, particularly to young people and the infirm. It is not intended to reduce the risk of fires caused by flying particles. A Fireguard can become hot to the touch during prolonged use. Children should not be left unattended.

Inspect your Fireguard regularly and do not use if any part is broken or missing.

Only use replacement parts supplied by Clippasafe.

When not in use, this Fireguard should be stored away from children.

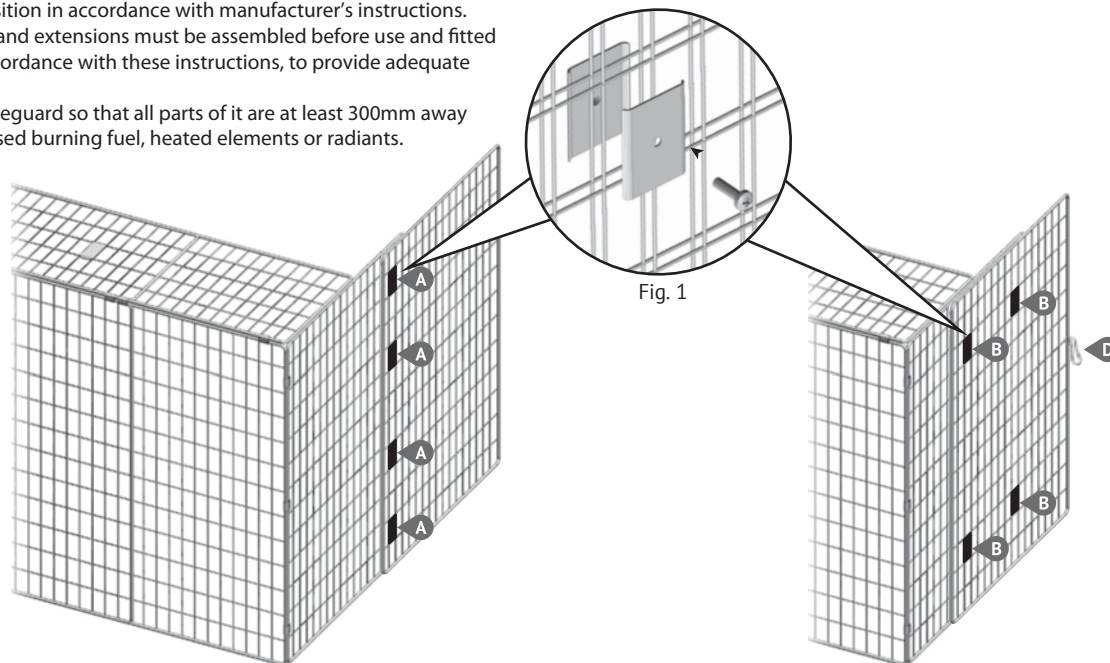

### Clippasafe Ltd.,

Lanthwaite Road, Clifton,  
Nottingham. NG11 8LD. England.

E-mail: [careline@clippasafe.co.uk](mailto:careline@clippasafe.co.uk)

Website: [www.clippasafe.co.uk](http://www.clippasafe.co.uk)

©Clippasafe Ltd 2014 - 1003/Sep2014



Complies with BS 8423:2010

**MODEL No.1003**  
for use with Fireguards  
Model No.1001 or 1002