



IMPORTANT - PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

Classic Fireguard

Instructions for Installation and Use

DIMENSIONAL INFORMATION:

The Fireguard should be securely fixed in accordance with these instructions such that no part of the Fireguard is closer than 300mm to any exposed burning fuel, heated elements or radiants.

Width: 143cm

Depth: 43cm (50cm including securing hooks and eyes).

Height: 82cm in centre, 65cm at sides

Fits around a hearth of maximum dimensions of 140cm x 45cm or on a flat hearth of minimum dimensions 148cm x 50cm.

PACK CONTENTS:


Left hand Fireguard Assembly
Right hand Fireguard Assembly
Top Panels x 2
Screws x 13
Small U Clips x 6
Large U Clips x 7
Screw eyes x 2
Wall plugs x 2
Instruction Sheet

TOOLS REQUIRED:

For Assembly:

Cross Head Screwdriver

Other tools may be required for wall mounting this Fireguard depending on the surface to which it is to be fitted.

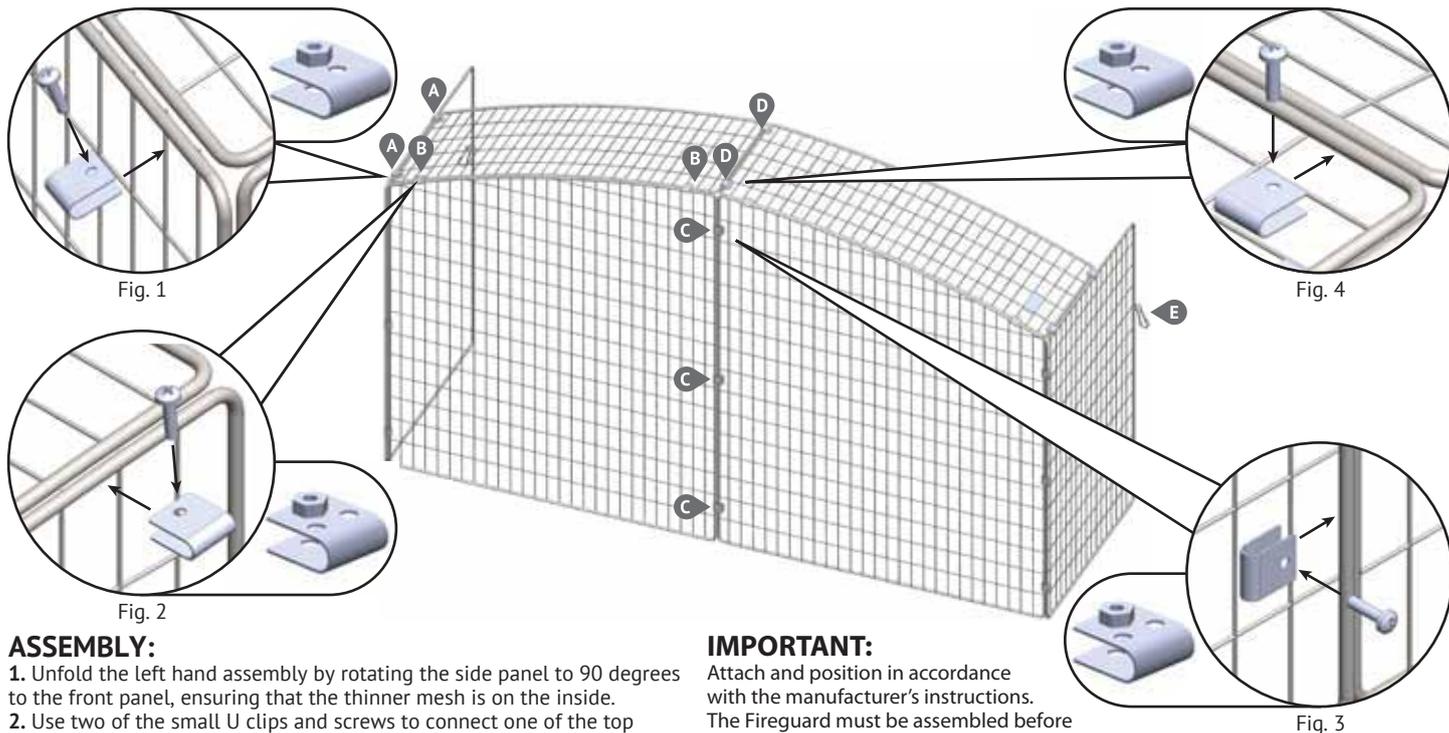

ASSEMBLY:

1. Unfold the left hand assembly by rotating the side panel to 90 degrees to the front panel, ensuring that the thinner mesh is on the inside.
2. Use two of the small U clips and screws to connect one of the top panels to the side panel, locating the clips at points **A** (Fig. 1).
3. Use two large U clips and screws to fix the top panel to the front panel, locating the clips at points **B** (Fig.2).
4. Repeat steps 1 to 3 to assemble the right hand assembly.
5. If fitting an extension too, fit it now to the left side assembly following the instructions provided with the extension.
6. The two assemblies can now be connected. First connect the front panels together using three large U clips and screws, locating the clips at points **C** (Fig.3)
7. Finally connect the top panels together using the two remaining small U clips and screws, locating the clips at points **D** (Fig.4).

FITTING:

Suitability of Mounting Surface - This product may be fitted to any structurally sound surface.

The Screw-Eyes supplied are suitable for screwing directly into timber substrate. Fixing to other surfaces will require surface preparation to be carried out. Fixing to plastered walls, plasterboard, brick or concrete will require the use of the supplied wall-plugs together with the screw-eyes.

1. With the Fireguard placed in its intended position, mark the mounting surface directly behind and at the same height as the safety hooks (**E**).
2. Prepare the surface as appropriate and insert wall-plugs if required.
3. Fit the screw-eyes firmly into the mounting surface.
4. Attach the safety hooks on both sides of the Fireguard to the screw-eyes.

IMPORTANT:

Attach and position in accordance with the manufacturer's instructions. The Fireguard must be assembled before use and fitted securely, in accordance with these instructions, to provide adequate protection. Position the Fireguard so that all parts of it are at least 300mm away from any exposed burning fuel, heated elements or radiants.

MAINTAINING YOUR FIREGUARD:

To clean, wipe over with a damp cloth. Do not use harsh abrasives. If your Fireguard becomes chipped, touch up with a non-toxic black enamel paint. Only use genuine replacement parts which are available from the manufacturer.

EXTENSIONS:

Extensions are available for this model of Fireguard:
Model No.1002/1 - 30cm width extension - maximum of 2 may be used.
Model No.1003 - Depth extensions.

SAFETY ADVICE:

WARNING: No object should be placed on the Fireguard.

WARNING: Do not dry washing or air clothes on the Fireguard.

A Fireguard is designed to protect people from falling into a fire, prevent burns and reduce the risk of injury, particularly to young people and the infirm. It is not intended to reduce the risk of fires caused by flying particles. A Fireguard can become hot to the touch during prolonged use. Children should not be left unattended. Inspect your Fireguard regularly and do not use if any part is broken or missing. Only use replacement parts supplied by Clippasafe. When not in use, this Fireguard should be stored away from children.

Clippasafe Ltd.,

Lanthwaite Road, Clifton,
Nottingham. NG11 8LD. England.

E-mail: careline@clippasafe.co.uk

Website: www.clippasafe.co.uk

©Clippasafe Ltd 2014 - 1002/Sep2014



Complies with BS 8423:2010

MODEL No.1002